

SECTION S

SERVICE TOOLS

ENGINE	Operation	Tool No.	Page No.
Camshaft liner reaming		18G 123 A 18G 123 AH 18G 123 AJ 18G 123 AN	S.7 S.8 S.8 S.8
Camshaft liner removing and replacing		18G 124 A 18G 124 K	S.8 S.8
Circlip removing and refitting		18G 257 18G 1004	S.9 S.16
Crankshaft and camshaft gear removing		18G 2 18G 98	S.7 S.7
Crankshaft primary gear oil seal removing and replacing		18G 134 18G 134 BC 18G 1043 18G 1068	S.8 S.8 S.17 S.17
Flywheel and clutch removal (coil spring clutch)		18G 304 18G 304 M 18G 587	S.10 S.10 S.14
Flywheel and clutch removal (diaphragm spring clutch)		18G 304 18G 304 N 18G 587	S.10 S.10 S.14
Flywheel housing bearing removing and replacing		18G 617 A	S.15
Flywheel oil seal replacing		18G 134 18G 134 BH	S.8 S.8
Oil pump relief valve seat grinding		18G 69	S.7
Piston refitting		18G 55 A	S.7
Timing cover oil seal replacing		18G 134 18G 134 BD	S.8 S.8
Timing cover refitting		18G 138 18G 1044	S.9 S.17
Torque setting nuts and bolts		18G 372 18G 536 18G 537 18G 592	S.11 S.11 S.11 S.15
Valve removing and refitting		18G 45	S.7

 
Operation								Tool No.	Page No.
Valve grinding-in	..	..	..	..	..	..	..	18G 29	S.7
Valve seat cutting	..	..	..	..	..	..	..	18G 27	S.7
								18G 167	S.9
								18G 167 A	S.9
								18G 167 B	S.9
								18G 167 C	S.9
								18G 167 D	S.9
FUEL SYSTEM									
Fuel tank gauge unit removing and refitting	..	..	..	..	..	..	..	18G 1001	S.16
CLUTCH									
Clutch dismantling and reassembling (coil spring clutch)	..	..						18G 304 M	S.10
								18G 571	S.12
Clutch dismantling and reassembling (diaphragm spring clutch)	..							18G 304 N	S.10
								18G 571	S.12
TRANSMISSION UNIT									
Change speed shaft oil seal replacement	..	..	..	..	..	..	..	18G 573	S.13
Circlip removing and refitting	..	..	..	..	..	..	..	18G 257	S.9
								18G 1004	S.16
Final drive gear removing and refitting	..	..	..	..	..			18G 586	S.14
								18G 587	S.14
First and third motion shaft bearing replacement	..	..	..	..	..	..	..	18G 579	S.13
First motion shaft and bearing removing	..	..	..	..	..			18G 284	S.10
								18G 284 B	S.10
First motion shaft bearing circlip—checking for correct thickness circlip	..	..	..	..	..	..	..	18G 569	S.13
First motion shaft needle-roller bearing removing and replacing	..							18G 581	S.13
								18G 581 B	S.13
								18G 589	S.14
● Idler gear bearing removing and replacing (3-speed synchromesh)	..	..	..	..	..	..	..	18G 581	S.13
								18G 582	S.13
Idler gear bearing replacing (4-speed synchromesh)	..	..	..	..	..	..	..	18G 1126	S.19●
Laygear needle-roller bearing replacement	..	..	..	..	..	..	..	18G 194	S.9
Layshaft reassembly	..	..	..	..	..	..	..	18G 471	S.11
Synchromesh unit assembling	..	..	..	..	..	..	..	18G 572	S.13

<i>Operation</i>	<i>Tool No.</i>	<i>Page No.</i>
● Third motion shaft bearing removing (3-speed synchromesh)	18G 613	S.15
Third motion shaft bearing removing (4-speed synchromesh)	18G 1127	S.19●
Torque setting nuts and bolts	18G 372	S.11
	18G 536	S.11
	18G 537	S.11
DIFFERENTIAL UNIT		
Differential bearing removing and replacement	18G 2	S.7
	18G 578	S.13
Drive shaft coupling flange removing and refitting	18G 669	S.15
Torque setting nuts and bolts	18G 372	S.11
	18G 537	S.11
AUTOMATIC TRANSMISSION		
Auxiliary pump and governor assembly removing and refitting	18G 1094	S.18
	18G 1097	S.18
	18G 1106	S.19
Converter housing oil seal replacing	18G 1068	S.17
	18G 1068 A	S.17
	18G 1087	S.17
Converter housing removing and refitting	18G 1088	S.18
	18G 1098	S.19
Converter removing and refitting	18G 587	S.14
	18G 1086	S.17
Differential drive shaft coupling removing	18G 1100	S.19
Forward clutch dismantling and reassembling	18G 1102	S.19
Forward clutch hub nut removing and refitting	18G 1095	S.18
	18G 1096	S.18
● Gear carrier assembly dismantling and reassembling	18G 1093 A	S.18
	18G 284 AJ	S.10●
Idler and input gears—checking adjustment	18G 1089	S.18
	18G 1089 A	S.18
Pressure and stall checks	18G 677 Z	S.15
	18G 677 C	S.15
Converter output gear oil seal removing and replacing	18G 134	S.8
	18G 134 CN	S.8
Top and reverse clutch dismantling and reassembling	18G 1103	S.19
Top and reverse clutch hub removing and refitting	18G 1095	S.18
	18G 1096	S.18
Torque setting	18G 372	S.11
	18G 537	S.11
	18G 592	S.15


Operation										Tool No.	Page No.	
DRIVE SHAFTS												
Constant velocity joint—checking ball cage and inner race											18G 1012 18G 1099	S.17 S.19
Drive shaft removing and refitting											18G 1063 18G 304 or 18G 304 Z 18G 304 F	S.17 S.10 S.11 S.10
Torque setting											18G 372	S.11
REAR SUSPENSION												
Displacer unit or strut removing and refitting											18G 703	S.16
Hub bearing outer race removing											18G 260 18G 260 C	S.9 S.10
Hub removing											18G 304 or 18G 304 Z 18G 304 F	S.10 S.11 S.10
Hydrolastic suspension—checking pressure											18G 685 18G 703	S.16 S.16
Hydrolastic suspension—depressurizing, evacuating, and pressurizing											18G 703	S.16
Radius arm bush reaming											18G 588 18G 588 A	S.14 S.14
Radius arm bushes removing and replacing											18G 583 18G 584	S.14 S.14
Radius arm needle bearing removing and replacing											18G 583 18G 583 B 18G 620	S.14 S.14 S.15
Radius arms (Hydrolastic suspension) removing and refitting										..	18G 703	S.16
Sub-frame (Hydrolastic models) removing and refitting											18G 703	S.16
STEERING GEAR												
Steering rack dismantling and reassembling											18G 207 18G 207 A 18G 707	S.9 S.9 S.16
Steering rack tie-rod ball joint removal											18G 1063	S.17
Torque setting											18G 372 18G 537	S.10 S.11

<i>Operation</i>	<i>Tool No.</i>	<i>Page No.</i>
FRONT SUSPENSION		
Displacer unit or strut removing and refitting	18G 703	S.16
Hydrolastic suspension—checking pressure	[18G 685 18G 703	S.16 S.16
Hydrolastic suspension—depressurizing, evacuating, and pressurizing	18G 703	S.16
Lower arm removal	18G 1063	S.17
Spring unit or strut (rubber suspension models) removing and refitting	[18G 574 B 18G 1063	S.12 S.17
Swivel hub ball joint removing and replacing	[18G 587 18G 1063	S.14 S.17
Swivel hub dismantling, fitting bearings, and reassembling	[18G 304 or	S.10
	18G 304 Z	S.11
	18G 304 F	S.10
	18G 575	S.13
	18G 260	S.10
Swivel hub driving flange removing (without dismantling the swivel hub)	[18G 260 H	S.10
	[18G 284	S.10
	18G 304 or	S.10
	18G 304 Z	S.11
	18G 304 F	S.10
Swivel hub outer oil seal replacing	[18G 304 P	S.10
	[18G 284	S.10
	18G 304 or	S.10
	18G 304 Z	S.11
	18G 304 F	S.10
Swivel hub removing and refitting	18G 304 P	S.10
	18G 705	S.16
	18G 705 B	S.16
	18G 1063	S.17
	18G 1063	S.17
Torque setting nuts and bolts	[18G 372 18G 537	S.11 S.11
Upper arm (Hydrolastic suspension models) removing, dismantling, and reassembling	[18G 581	S.13
	18G 582	S.13
	18G 582 A	S.14
	18G 703	S.16
	18G 1063	S.17
Upper arm (rubber suspension models) removing, dismantling, and reassembling	[18G 574 B	S.12
	18G 581	S.13
	18G 582	S.13
	18G 582 A	S.14
	18G 1063	S.17
BRAKING SYSTEM		
Brake adjusting	18G 619 A	S.15


	<i>Operation</i>	<i>Tool No.</i>	<i>Page No.</i>
BODY			
	Body alignment checking	18G 560	S.12
		18G 560 A	S.12
		18G 560 E	S.12
●	Body alignment checking (not illustrated)	Churchill 7/700●	
	Windscreen and back-light glass refitting..	18G 468	S.11
		18G 468 A	S.11

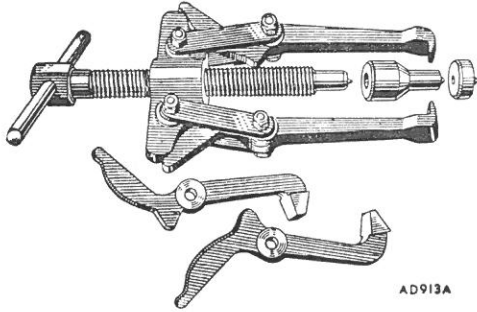

 18G 2. Crankshaft Gear and Pulley Remover

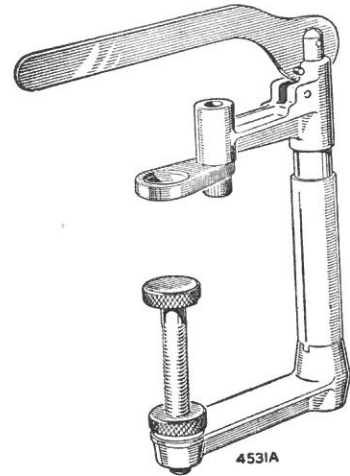


18G 45. Valve Spring Compressor

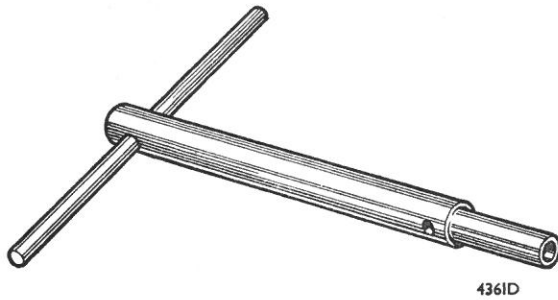 


18G 27. Valve Seat Cutter Handle



 
18G 29. Valve Suction Grinder

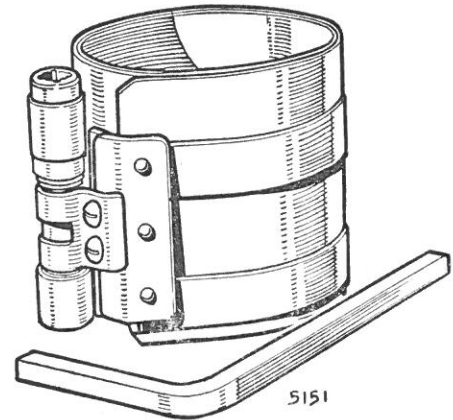


18G 55 A. Piston Ring Compressor

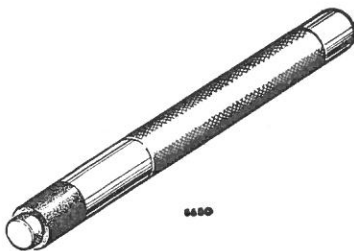 

 18G 69. Oil Pump Release Valve Grinding-in Tool

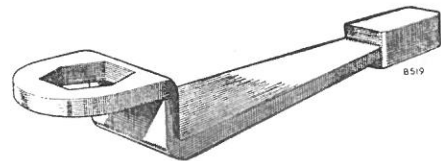

18G 98. Shock Spanner

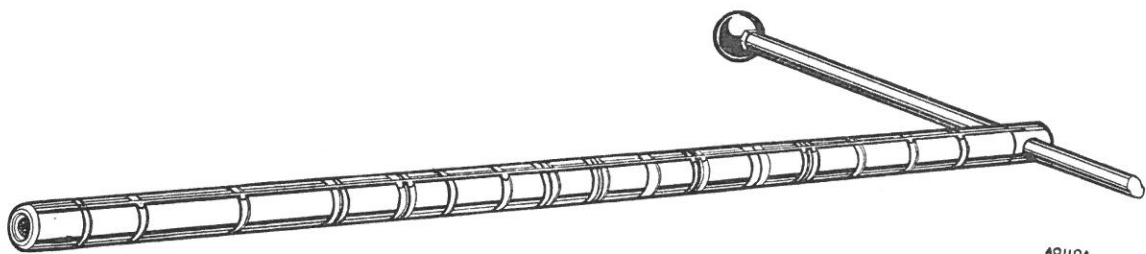 


18G 123 A. Camshaft Liner Reamer (basic tool)



A1039

 18G 123 AH. Camshaft Liner Reamer Pilot—Centre

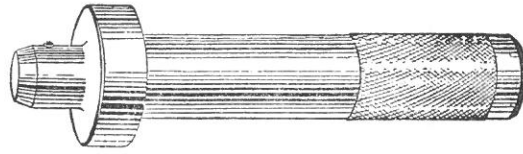


8829XX

18G 134. Bearing and Oil Seal Replacer (basic tool)




A1033

 18G 123 AJ. Camshaft Liner Reamer Pilot—Rear

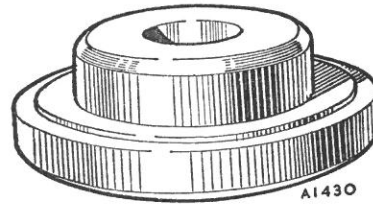


A1430

 18G 134 BC. Crankshaft Primary Gear Oil Seal Replacer Adaptor

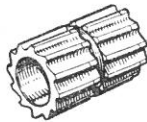


A1037

 18G 123 AN. Camshaft Liner Reamer Cutter—Front

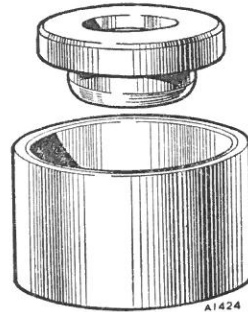


A1424

 18G 134 BD. Timing Case Oil Seal Replacer Adaptor

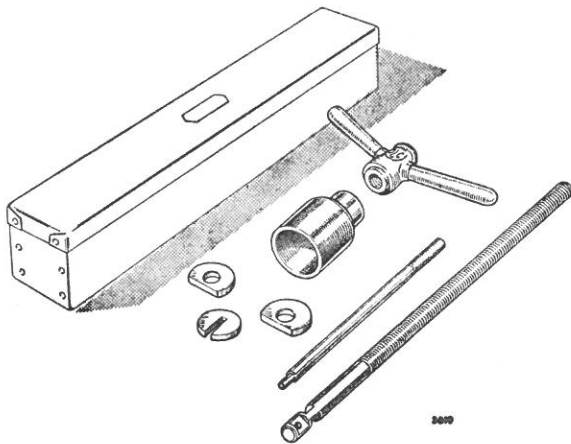

8810

 18G 124 A. Camshaft Liner Remover and Replacer (basic tool)

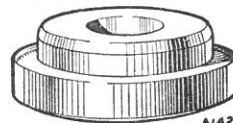


A1429A

18G 134 BH. Flywheel and Front Hub Oil Seal Replacer Adaptor




A4933

 18G 124 K. Camshaft Liner Remover Adaptor

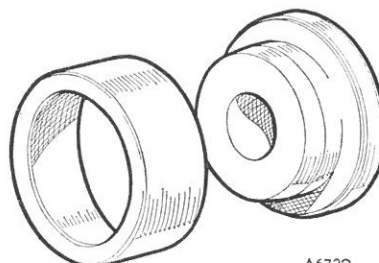


A6720

 
18G 134 CN. Replacer Oil Seal Stator Carrier

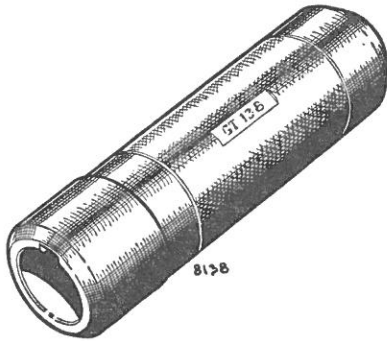

 
18G 138. Crankshaft Gear and Pulley Replacer

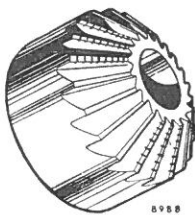


18G 167. Valve Seat Finishing Cutter

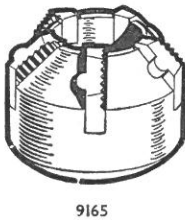 


18G 167 A. Valve Seat Glaze Breaker

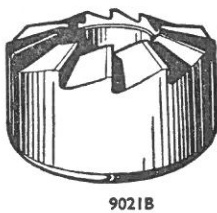 

 
18G 167 B. Valve Seat Narrowing Cutter—Top

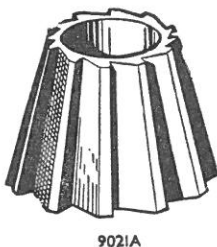

 
18G 167 C. Valve Seat Narrowing Cutter—Bottom




18G 167 D. Valve Seat Cutter Pilot

 

 
18G 194. Laygear Needle-roller Bearing Replacer

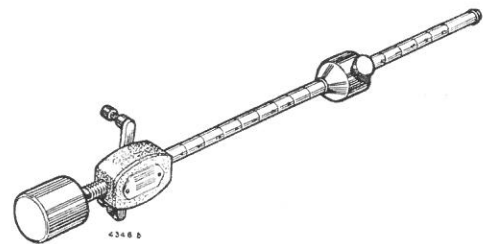


18G 207. Bearing Preload Gauge

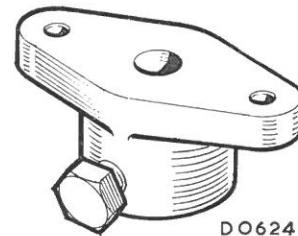 

 
18G 207 A. Steering Rack Pinion Preload Adaptor

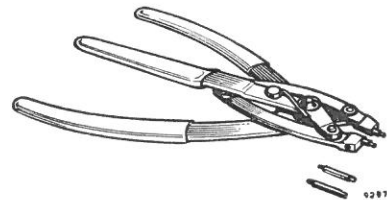

18G 257. Circlip Pliers—Large

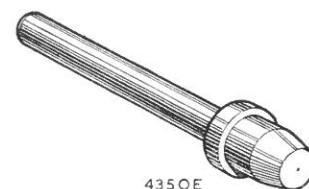 


 18G 260. Hub Bearing Outer Race Remover (basic tool)

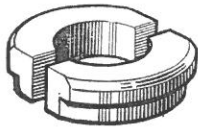


4349E

 18G 260 C. Hub Bearing Outer Race Remover Adaptor

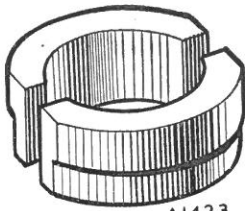

A1423

 18G 260 H. Front Hub Drive Flange Bearing Outer Race Remover Adaptor

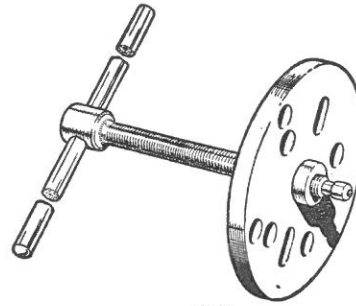


8251F

18G 304. Front and Rear Hub Remover (basic tool)




8251

 18G 304 F. Front and Rear Hub Remover Bolt Adaptor

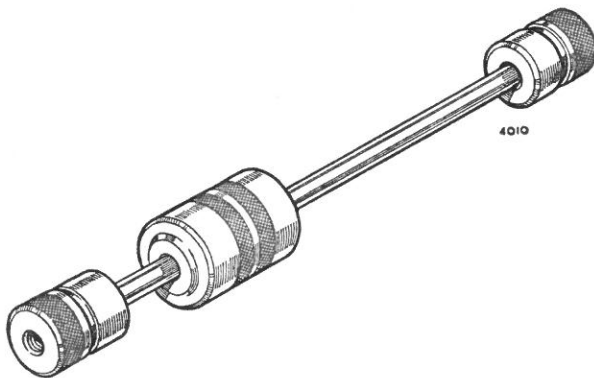


4010

 18G 284. Impulse Extractor (basic tool)

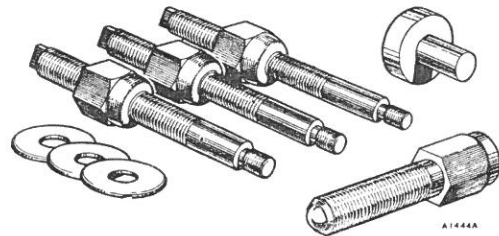


A1444A

 18G 304 M. Flywheel and Clutch Remover Adaptor

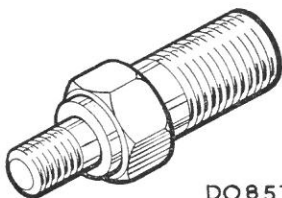

DO857

 
● 18G 284 AJ. Planetary Gear Spindles Remover Adaptor ●

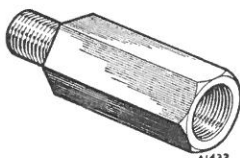

A1432


18G 284 B. First Motion Shaft Remover Adaptor

 S.10

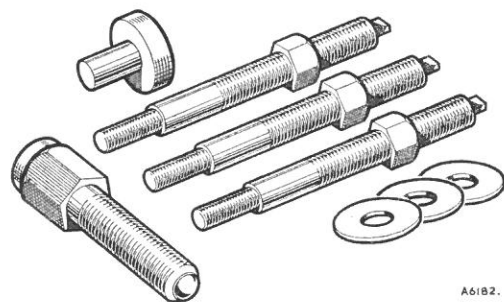


A6182

 18G 304 N. Flywheel and Clutch Remover Adaptors

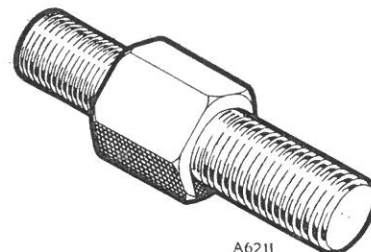


A6211

 
18G 304 P. Drive Flange Remover Adaptor

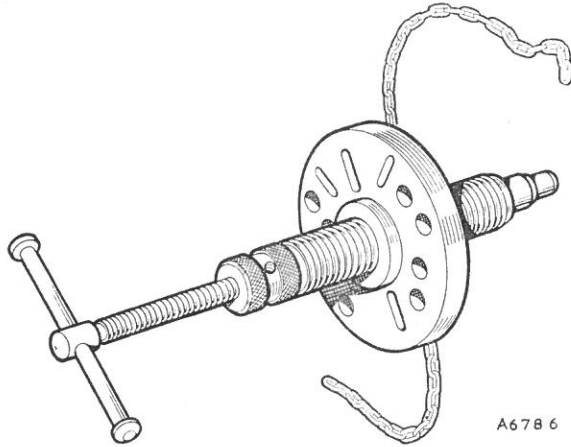

 
18G 304 Z. Hub Remover—Hydraulic (basic tool)

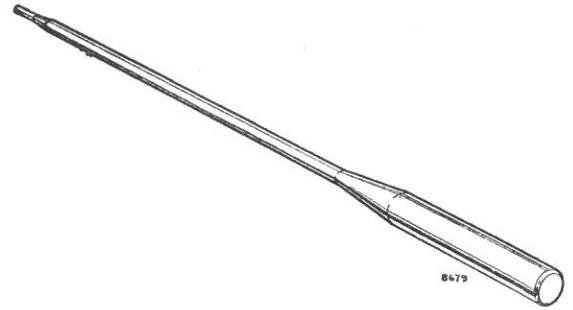


18G 471. Dummy Layshaft

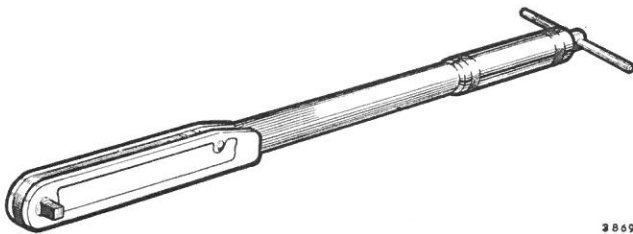 

 18G 372. Torque Wrench—30 to 140 lb. ft. (4 to 20 kg.,m)

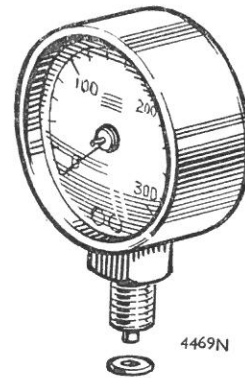


18G 502 A. Hydraulic Pressure Gauge

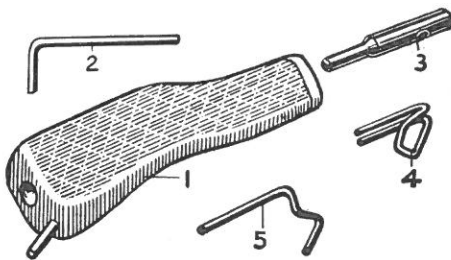 


18G 468. Rubber Moulding Glazing Tool

The tool comprises:


- | | | |
|------------|----------|----------|
| 1. Handle. | 3. Post. | 5. Hook. |
| 2. Key. | 4. Eye. | |

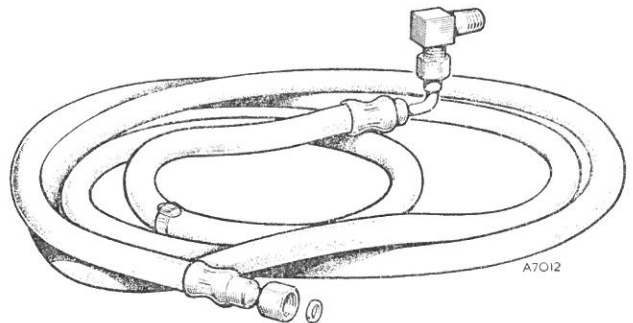 

 18G 502 K. Pressure Hose (8 ft.) with Adaptor

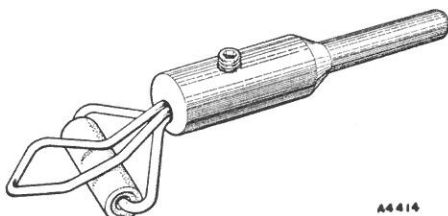


 18G 468 A. Rubber Moulding Glazing Tool Adaptor

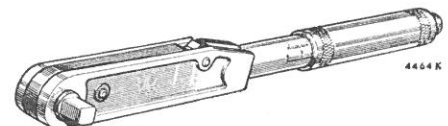


18G 536. Torque Wrench—20 to 100 lb. in. (2 to 8 lb. ft.) (300 to 1200 gm.m.)

 18G 537. Torque Wrench—10 to 50 lb. ft. (2 to 7 kg.m.)

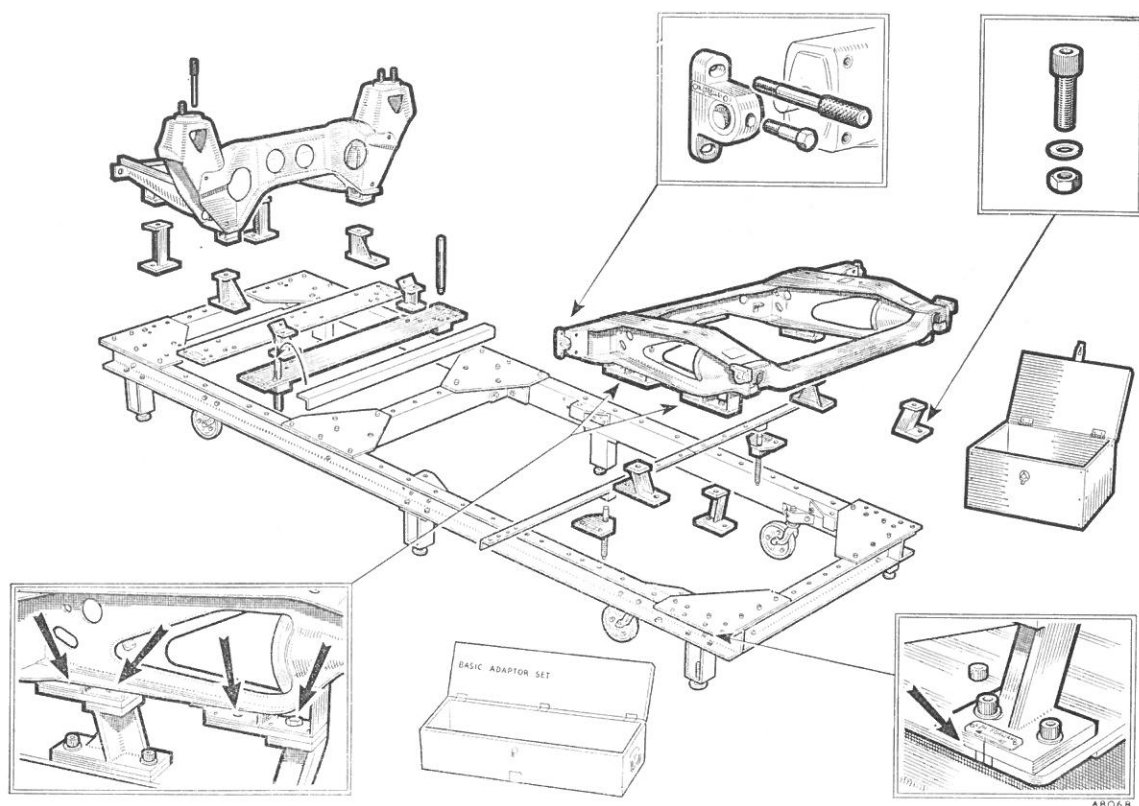


 18G 560 E. Body Checking Jig Adaptor Set

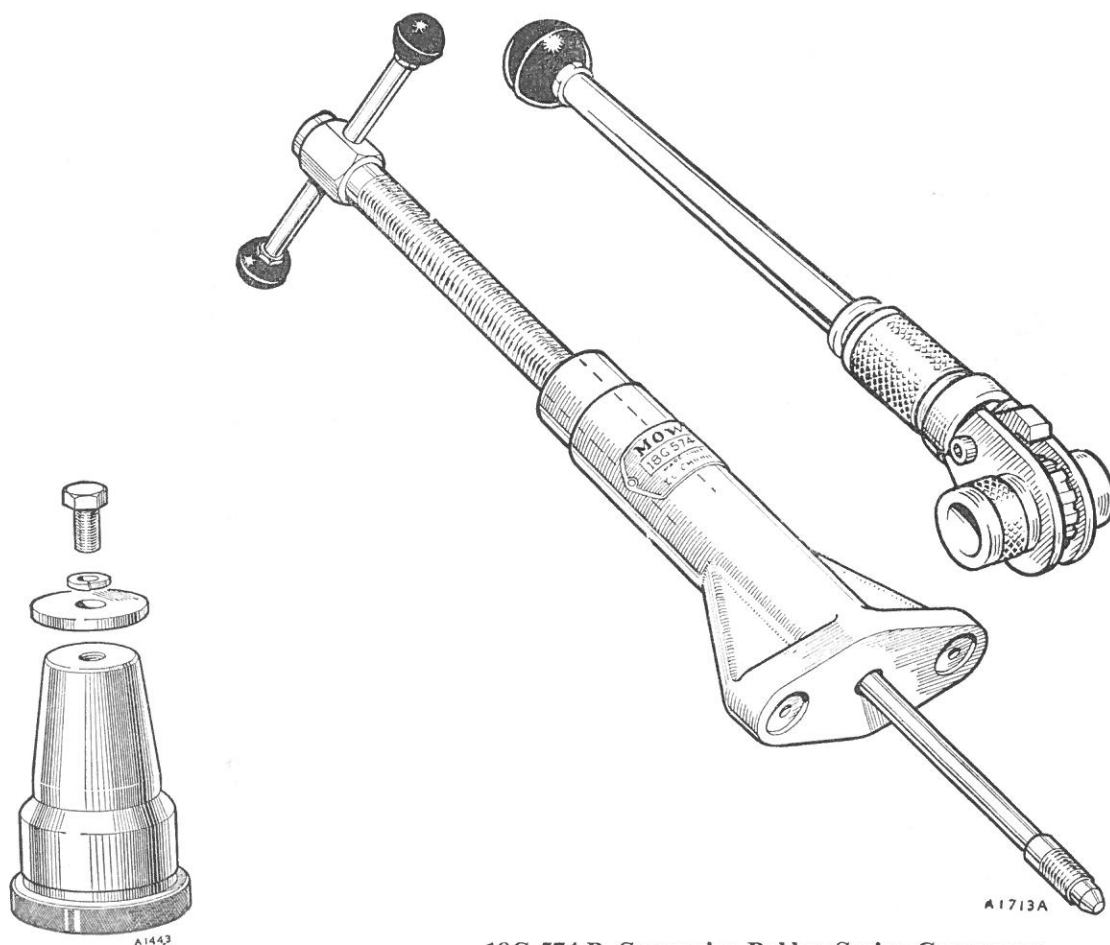


18G 571 Clutch Centralizer

 18G 574 B. Suspension Rubber Spring Compressor

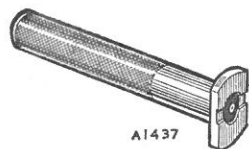

 
18G 569. First Motion Shaft Bearing Circlip Gauge

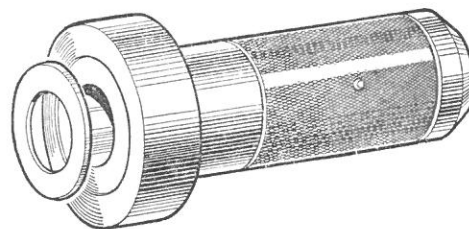


18G 579. First and Third Motion Shaft Bearing Replacer



 
18G 572. Synchromesh Unit Assembly Ring

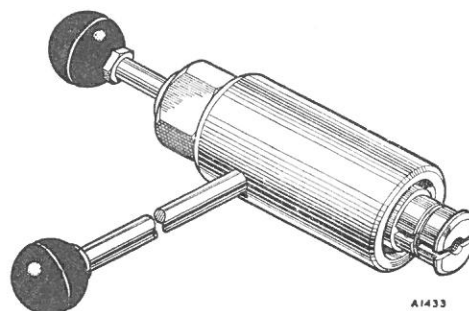

 
18G 581. Front Suspension and Idler Gear Needle-bearing Remover

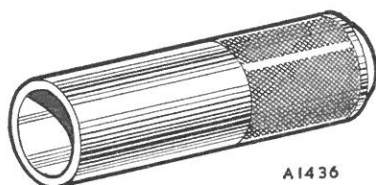

 
18G 573. Change Speed Shaft Oil Seal Replacer

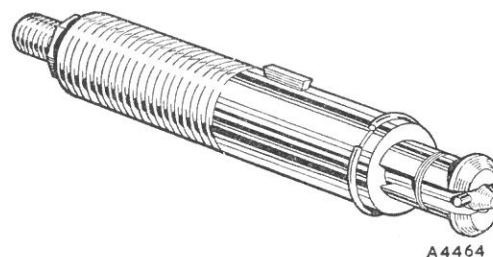

 
18G 581 B. First Motion Shaft Spigot Bearing Remover Adaptor

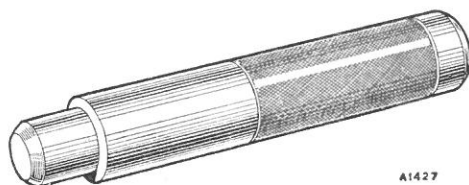


18G 575. Front Hub Drive Flange Remover

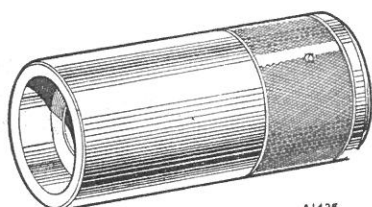 


18G 578. Differential Bearing Replacer

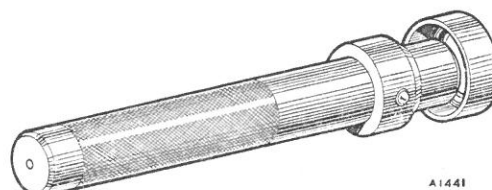 

 
18G 582. Front Suspension and Idler Gear Bearing Replacer

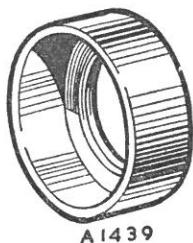

 
18G 582 A. Front Suspension and Idler Gear Needle Bearing Replacer Adaptor

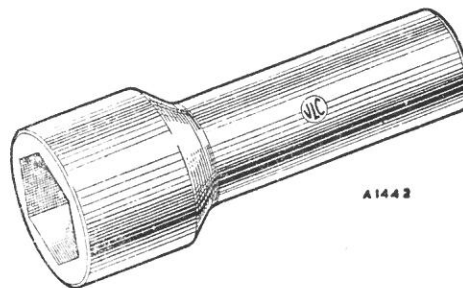


18G 586. Final Drive Gear Nut Spanner

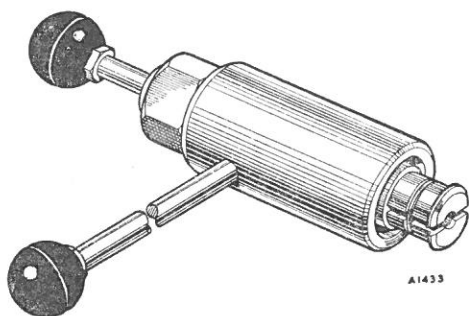 

18G 583. Rear Radius Arm Bush Remover

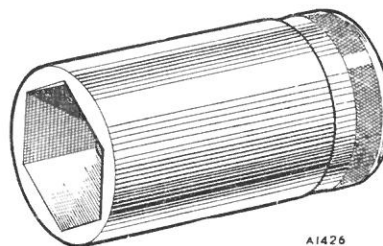 

 
18G 587. Swivel Hub Ball Pin Nut Spanner

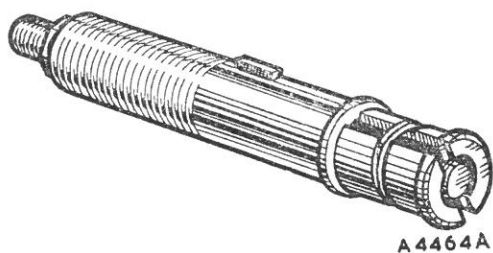


18G 583 B. Rear Radius Arm Needle Bearing Remover Adaptor



 
18G 588. Rear Radius Arm Bush Reamer

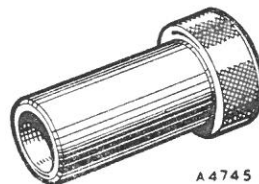


18G 588 A. Reamer Guide Bush

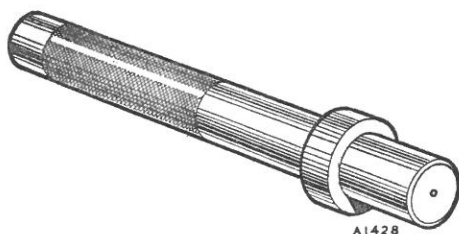 

18G 584. Rear Radius Arm Bush Replacer

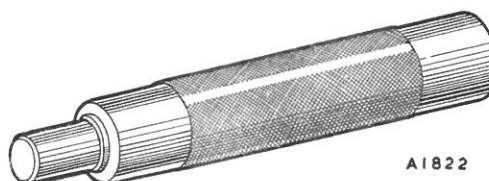 


 18G 589. First Motion Shaft Spigot Bearing Replacer

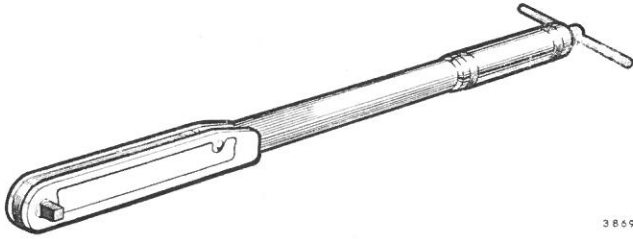


3869

 18G 592. Torque Wrench—50 to 225 lb. ft. (5 to 30 kg. m.)

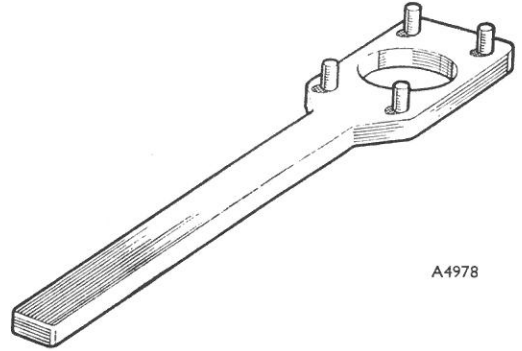


A4978

 18G 669. Drive Shaft Coupling Flange Wrench

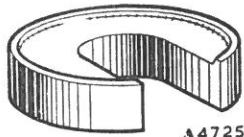


A4725

 18G 613. Third Motion Shaft Bearing Remover

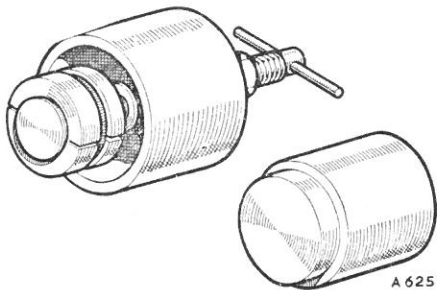


A 6251

 18G 617 A. Flywheel Housing Bearing (First Motion Shaft) Outer Race Remover/Replacer

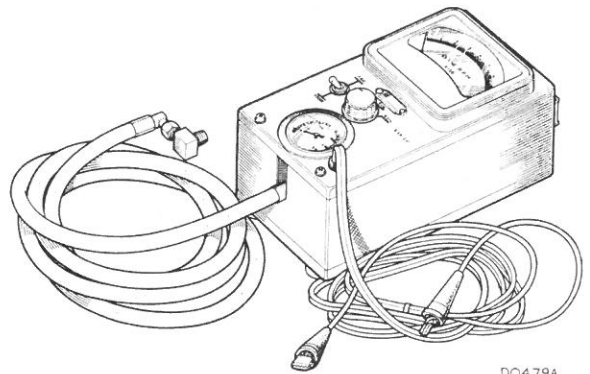


DO479A

 18G 677 Z. Pressure Test and Tachometer Equipment

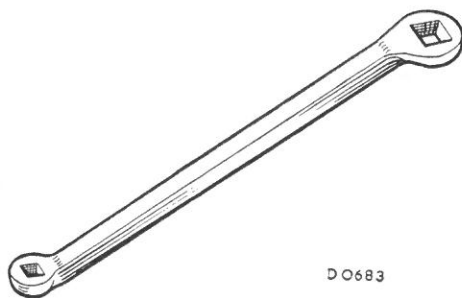


DO683

 18G 619A. Brake Adjusting Spanner

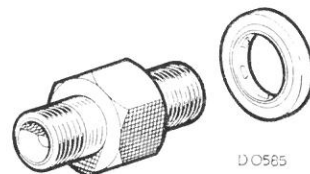


DO585

 18G 677 C. Pressure Test Equipment Adaptor

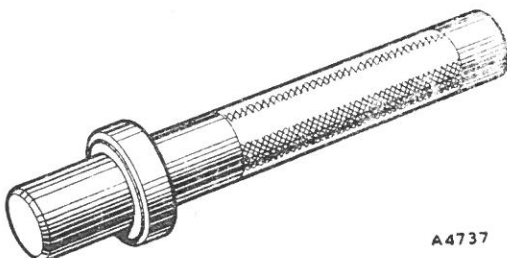


A4737

 18G 620. Rear Radius Arm Needle Bearing Replacer

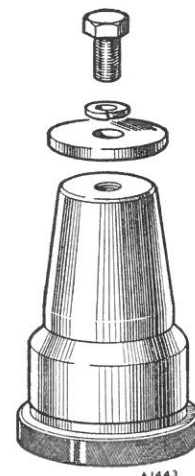


A1443

 
18G 684. Clutch Centralizer

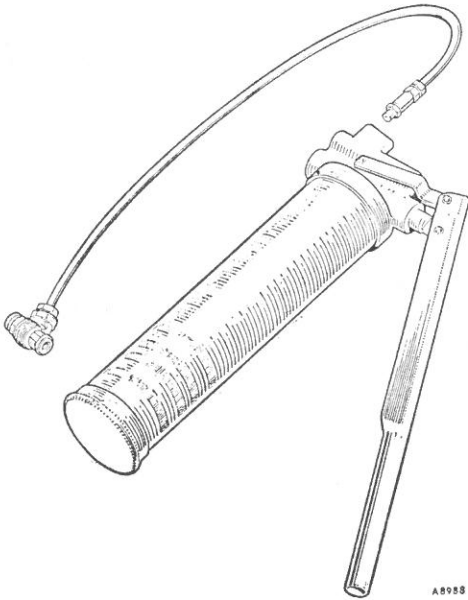

18G 685. The Hydrolastic Hand Pump


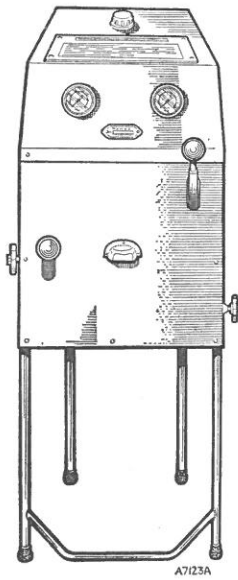 


 18G 703. The Hydrolastic Suspension Service Unit

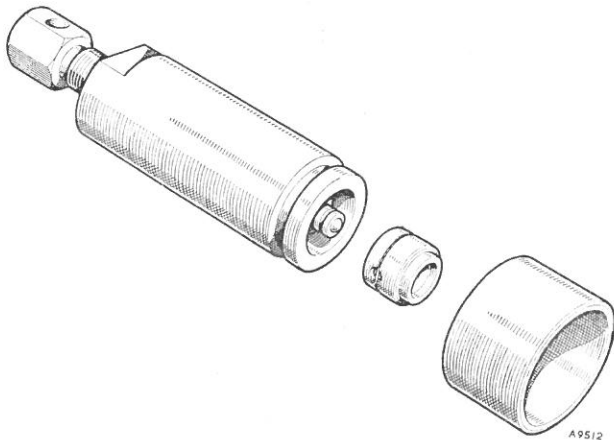


18G 705. Bearing Centre Race Remover (basic tool)

  
S.16

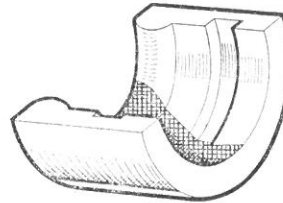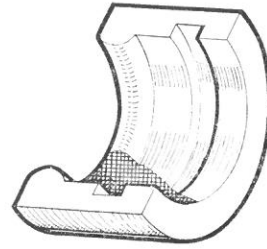

 
18G 705 B. Bearing Centre Race Remover adaptor

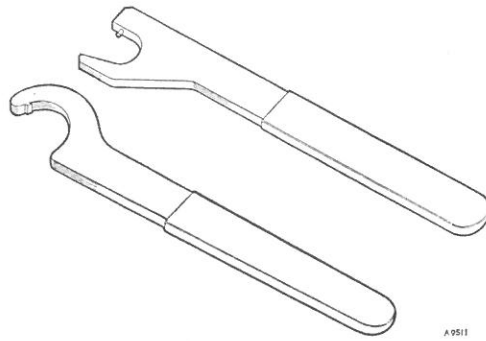

 
18G 707. Steering Rack Ball Joint Spanners

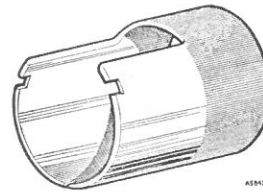

18G 1001. Gauge Locking Ring

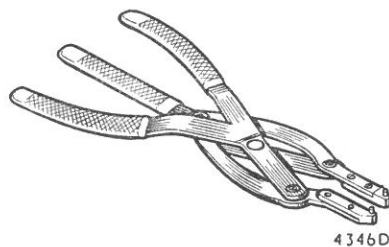 


18G 1004. Circlip Pliers

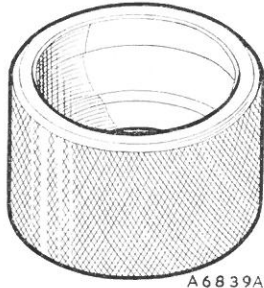 


A6839A

 18G 1012. Selection Gauge—Constant Velocity Joint

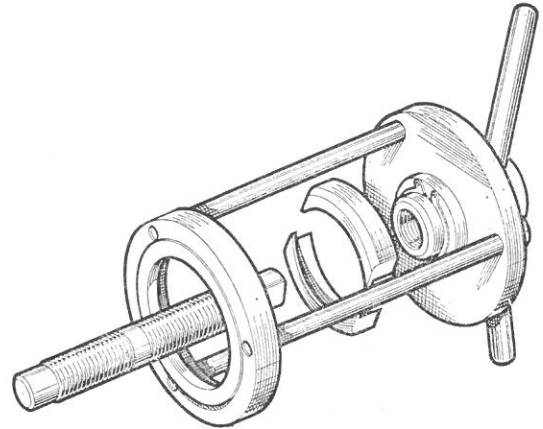


A6722

 18G 1068. Remover and Replacer (basic tool)

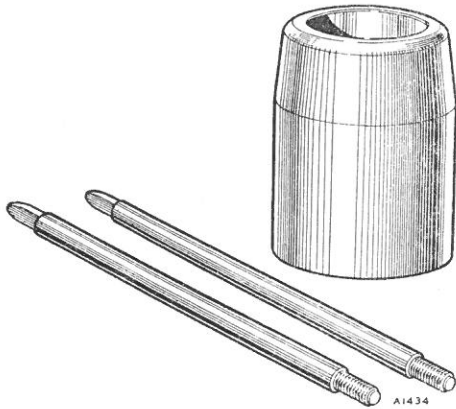


A1434

 18G 1043. Crankshaft Primary Gear Oil Seal Protector Sleeve

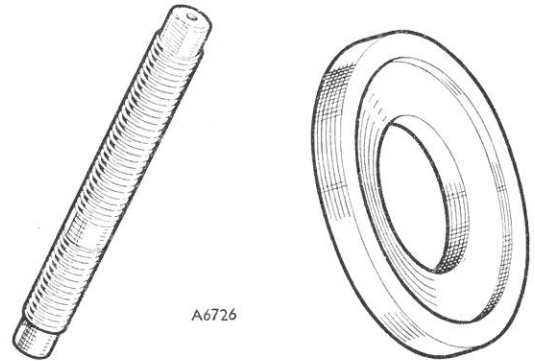


A6726

 18G 1068 A. Adaptor Set—Replacer Converter Housing Oil Seal. Use with 18G 1068

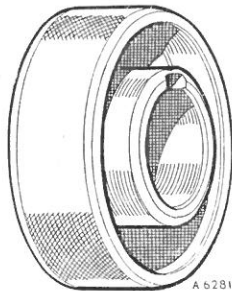


A6281

 18G 1044. Engine Front Cover Centralizer

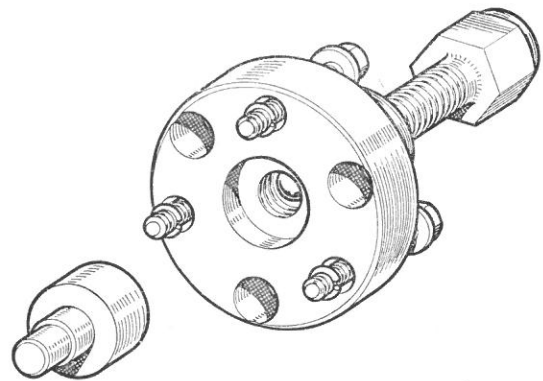


A6753.

 18G 1086. Converter Remover

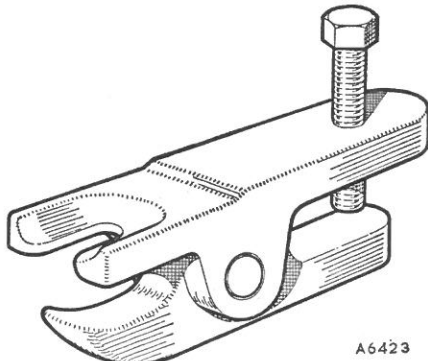


A6423

 18G 1063. Steering Arm and Swivel Hub Ball Pin Remover

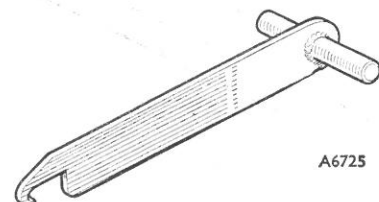


A6725

 18G 1087. Converter Housing Oil Seal Remover

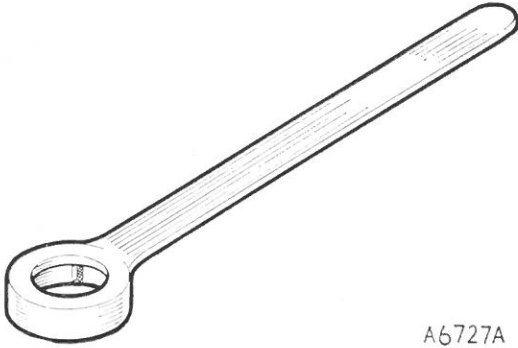


A6727A

 18G 1088. Converter Output Gear Holding Tool

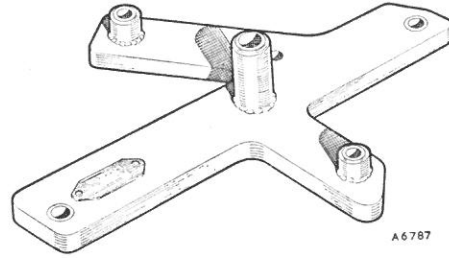


A6787

 18G 1094. Positioning Fixture—Oil Pump Pipes

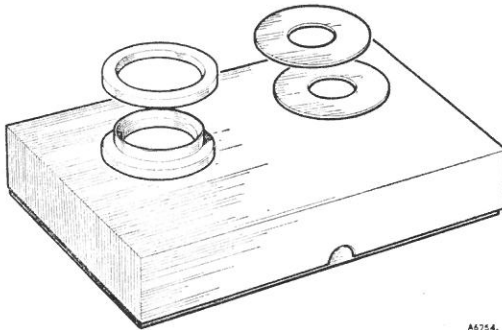


A6754

 18G 1089. Idler and Input Gear Gauge Kit

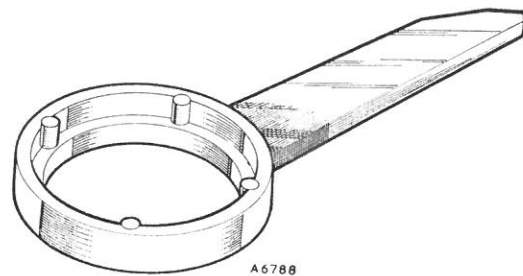


A6788

 18G 1095. Holder—Top and Reverse Clutch Hub

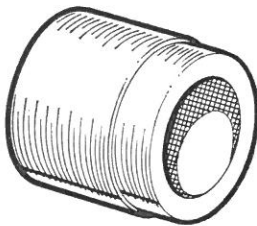


D 0309

 18G 1089 A. Input Gear Gauge Kit Adaptor

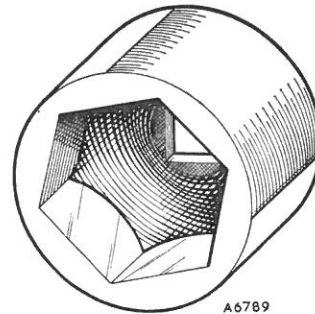


A6789

 18G 1096. Socket Spanner—Forward Clutch Hub Nut

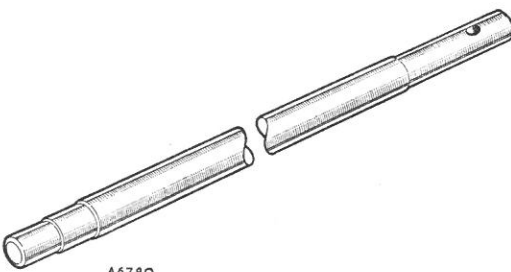


A6780

 18G 1093A. Dummy Shaft—Forward Gear Carrier Assembly

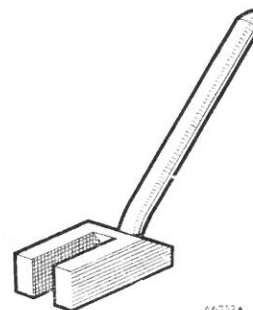


A6712A

 18G 1097. Retainer—Forward Clutch

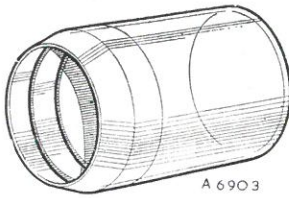


A 6903

 18G 1098. Protector Sleeve—Converter Output Gear Oil Seal

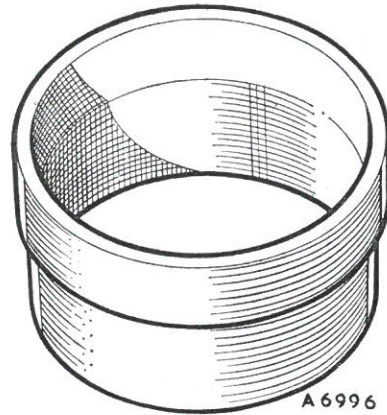


A 6996

 18G 1103. Replacer—Reverse Clutch Piston Seal

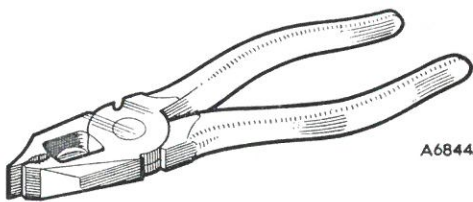


A6844.

 18G 1099. Pliers—Retaining Clip—Drive Shaft Boots

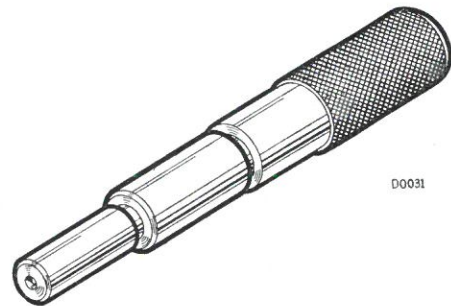


D0031

 18G 1106. Centralizer—Governor Housing

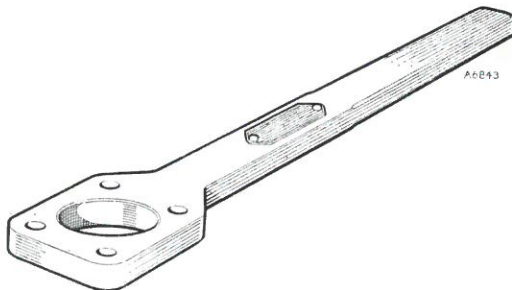


A6843

 18G 1100. Wrench—Drive Shaft Coupling Flange

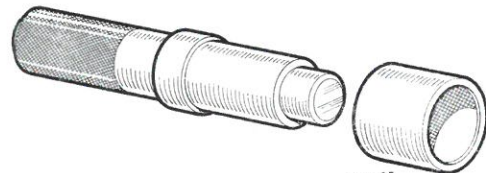


D 0625

 ● **18G 1126. Replacer—Idler Gear Bearing** ●

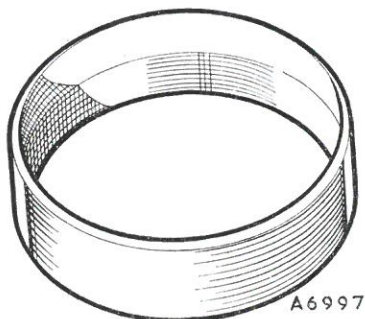

A6997

 18G 1102. Replacer—Forward Clutch Piston Seal

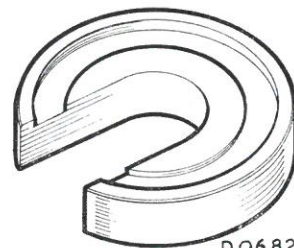

D 0682

● **18G 1127. Third Motion Shaft Bearing Remover**
(Use on four-speed synchromesh transmission.) ●

